



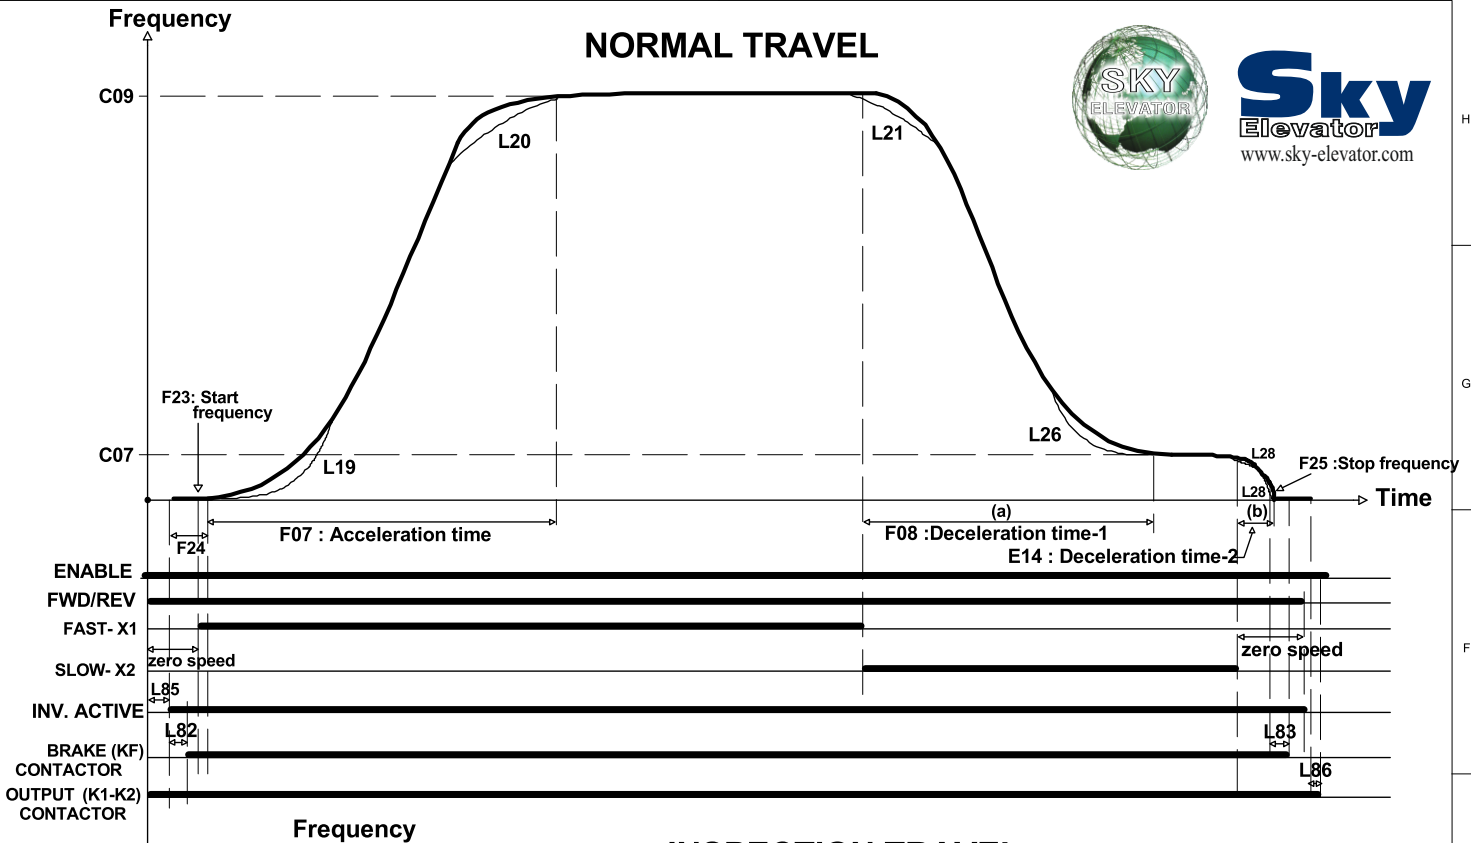



## NORMAL TRAVEL

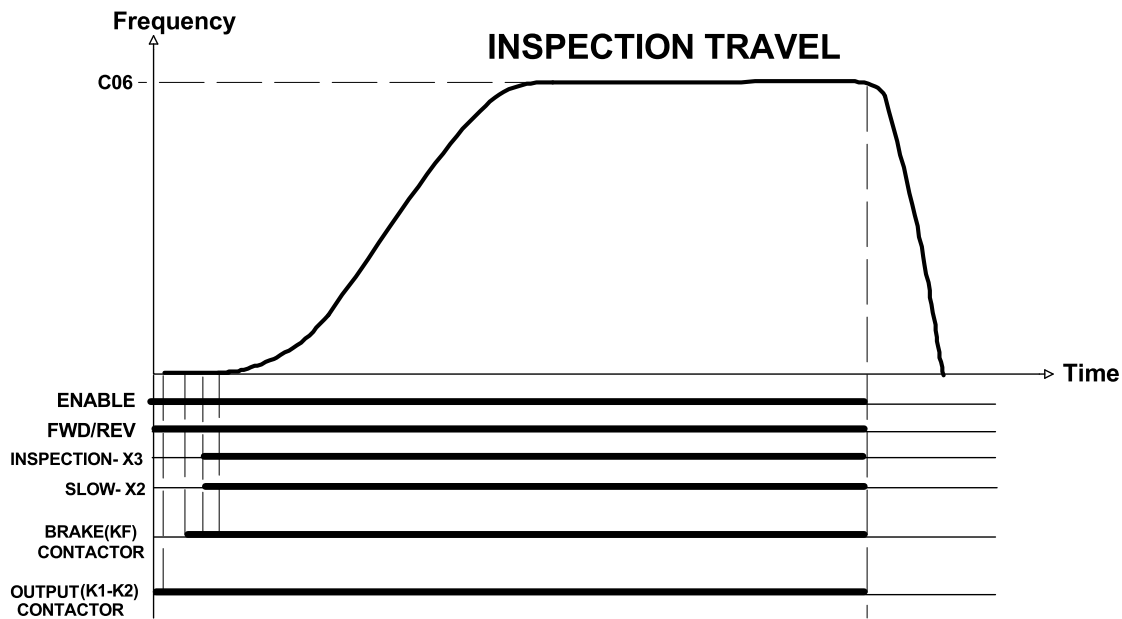

## INSPECTION TRAVEL



## ENCODER CONNECTIONS

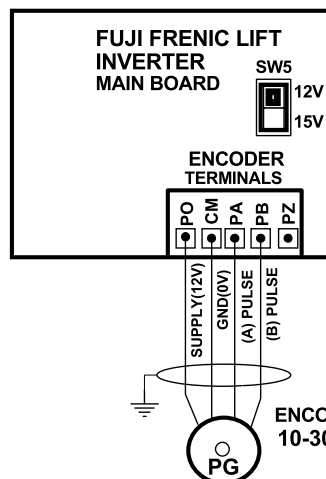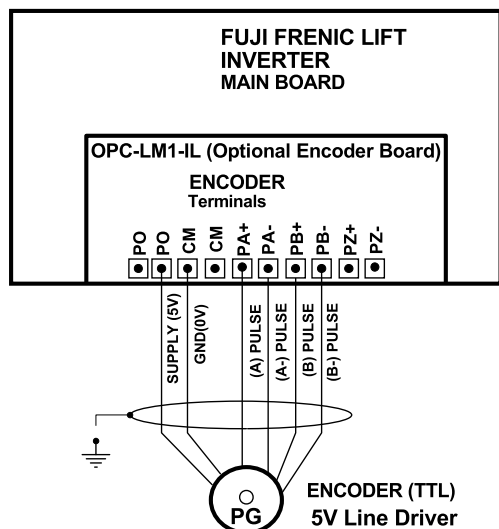

L01 : (0) ENCODER SELECTION (P/R)  
L02 : ENCODER PULSE (P/R)

This document is a sample for applications. All information contained in these materials are subject to change by SKY ELEVATOR without notice. SKY ELEVATOR assumes no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors.

### FUJI FRENIC LIFT SERIES INVERTER OPERATION DIAGRAM

SKY ELEVATOR	SERIES	FUJI	DRW.	SKY
	PROJ.	FJ004	APPRV.	SKY
	REV.	01	DATE	16 NOV 12

F7.5.5.02.21