



817-818 : When mechanical switches are used as high speed limit switches in well, ignore these connections in cabin connections.

ML1-ML2 : These are used when A05(Floor Selector) =0 (Monostable) or levelling/pre-opening system is activated or A17(UCM Control Type) is selected as 4 or 6.

LIFT CONTROLLER



Automatic Landing Door
Semi-automatic Landing Door

This document is a sample for applications. All information contained in these materials are subject to change by SKY ELEVATOR without notice. SKY ELEVATOR assumes no responsibility for any damage, liability, or other loss arising from these inaccuracies or errors.

F/7.5.5.02.69

SERIAL CAR CONNECTIONS				
SKY ELEVATOR	SERIES	SKY 911 (ACT)	DRW.	SKY
	PROJ.	ACT029	APPRV.	SKY
	REV.	03	DATE	12 JAN 13

A

A

B

B

C

C

D

D

1

2

3

4

5

6

7

8

1

2

3

4

5

6

7

8