



Skyelevator®



DIN EN ISO
9001,2000 **CE**

İkitelli OSB. Metal İş San. Sit. 19 Blok No:1 B.ŞEHİR //İSTANBUL / EUROPE

Tel : +90 (212 444 19 88 (pbx) Gsm : +90 533) 293 96 56

WEB:www.sky-elevator.com E Mail:sky@sky-elevator.com

ROPE WRAPPING MACHINE INSTRUCTION BOOK

P BUTTON : FOR PROGRAMMING , DO NOT USE

SET BUTTON : FOR SETTING

RESET BUTTON: FOR RESET AND ENTERING DATA

ENTER BUTTON: THE LAST BUTTON. ENTERING DATA AND CONFIRM THE DATA

NOTICE!!! DO NOT USE THE “ P BUTTON”

WHILE RUN THE MACHINE ;

- 1) PRESS THE RESET BUTTON AND RESET THE DATA (METER DATA).
- 2) PRESS THE SET BUTTON. ENTER THE DATA (METER) AT FLASHING PLACE BY USING THE RESET BUTTON.
- 3) AFTER ENTER THE DATA (METER) PUSH ENTER BUTTON, THE LAST BUTTON.
(FIRST 4 SECTION FOR METER / LAST TWO SECTION FOR CENTIMETER E.G. 0025.50=25,50 MT).
- 4) WIRE UP THE DRUMP PASS THROUGH THE ENCODER SOCKET MEANWHILE ROPE STARTS TO MEASURE.
- 5) AFTER WIRE UP THE ROPE, PRESS GREEN START BUTTON.
- 6) WHEN THE DATA OF METER ENDS THE MACHINE WILL STOP AUTOMATICALLY.
- 7) IF YOU WANT TO STOP IT BY YOURSELF , PRESS RED BUTTON.
- 8) FOR CUT OFF THE SECOND PART OF THE ROPE AT THE SAME METERS :
 - A – PUSH THE RESET BUTTON AND RESET THE DATA (METER DATA).
 - B – WIRE UP THE DRUMP PASS THROUGH THE ENCODER SOCKET.
 - C – PRESS GREEN BUTTON.